


Smart Room Sensor PIR & CO2 Quick Start Guide

Activating the Device


The device is shipped with the batteries installed and pull tabs on the positive terminals of the batteries. Removing the pull tabs will activate the device. There is no need to open the enclosure to activate the device.

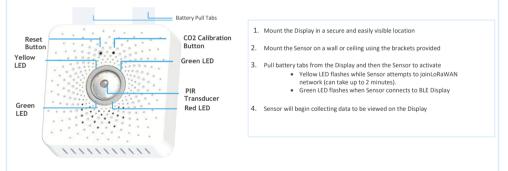

Note:

- · Sensor and Display connect automatically upon activation
- Distance between Sensor and Display should not exceed 10 Meters for reliable connectivity

Activation & Configuration

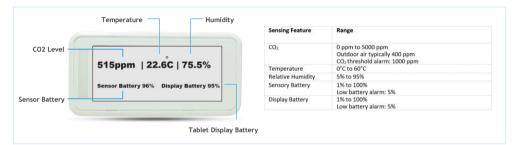

The default data reporting periods are listed in Table 1. To make changes to the default data reporting periods, please refer to the knowledge base on the support portal at support.tektelic.com

Table 1: Default Reporting Periods of the Smart Room Sensor CO2

Default Reporting Periods	
During Active School Hours	Outside of School Hours
Every 5 minutes	Every 1 hour
Every 5 minutes	Every 1 hour
Every 5 minutes	Every 1 hour
Every 5 minutes	Every 1 hour
Every 5 minutes	Every 1 hour
	During Active School Hours Every 5 minutes Every 5 minutes Every 5 minutes Every 5 minutes

Active Hours : 8am to 5pm Monday to Friday

Reports are sent to both the LoRaWAN Network and the Display

Troubleshooting

If the device remains blinking yellow for more than two minutes follow these troubleshooting actions:

- Ensure the device is provisioned on the Network Server
- Ensure the local LoRa Gateway has also been provisioned on the Network Server
- Ensure a local LoRa Gateway is online

Note:

If you have questions about using this device please visit the TEKTELIC Support Portal support.tektelic.com for access to our knowledge base.

www.tektelic.com